

## Chapter 1 EasyBuilder 8000 Installation

### EasyBuilder 8000 Installation

#### (1) Software:

Download from EasyBuilder 8000 CD or visit Weintek Labs, Inc.'s website at <http://www.weintek.com> to obtain all available software editions (including Simplified Chinese, Traditional Chinese, French, Korean, Italian, Spanish and English version) and latest upgraded files.

#### (2) Hardware Requirements (Recommended):

CPU: INTEL Pentium II or above

Memory: 64MB or above

Hard Disk: 2.5GB or above (Disc space available at least 10MB)

CD-ROM: 4X or above

Display: 256 color SVGA with 800 x 600 resolution or greater

Keyboard and Mouse: One for each

Ethernet: for project downloading/uploading

RS-232 COM: At least one RS-232 serial port available for on-line simulation

Printer

#### (3) Operating System:

Windows 2000/Windows NT/Windows XP/Windows Vista

#### (4) Installation:


1) When putting the EB8000 CD into CD Rom, the Autorun program will automatically execute by computer. Or run [Autorun.exe] from the root directory manually and the screen shows as below:




2) Click [Install] and the screen appears as below:




3) Select the target file for software installation or select suggestive path and then click [Next].

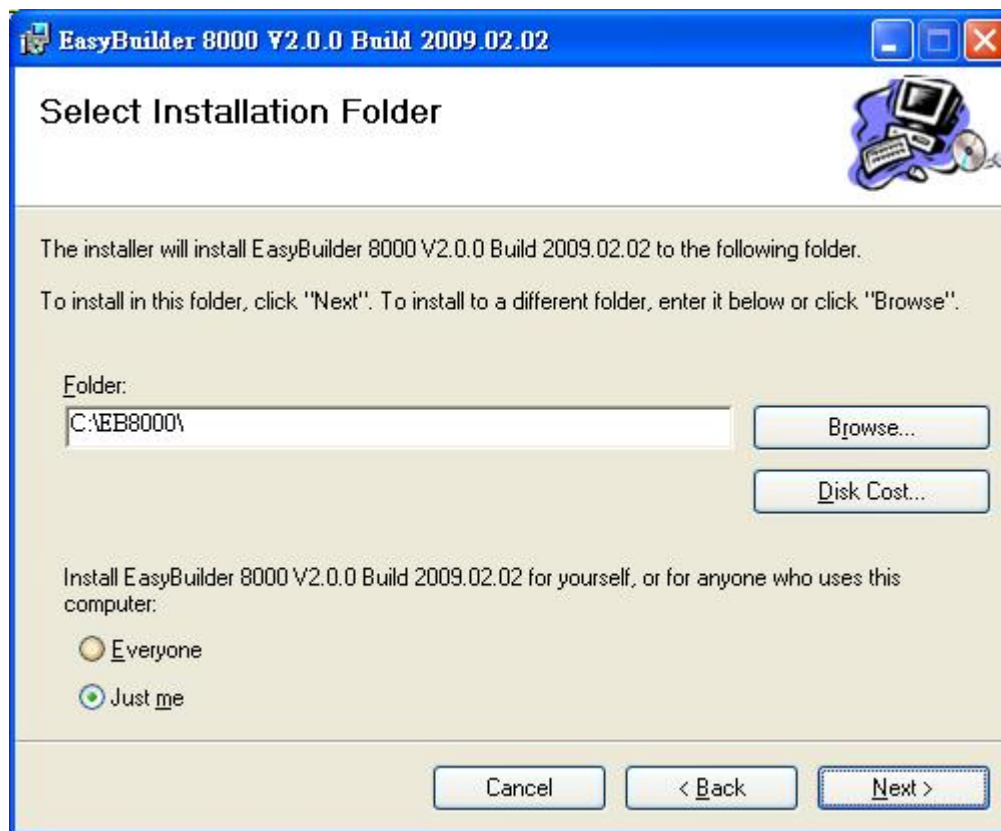


4) Click "Next" to confirm the installation.

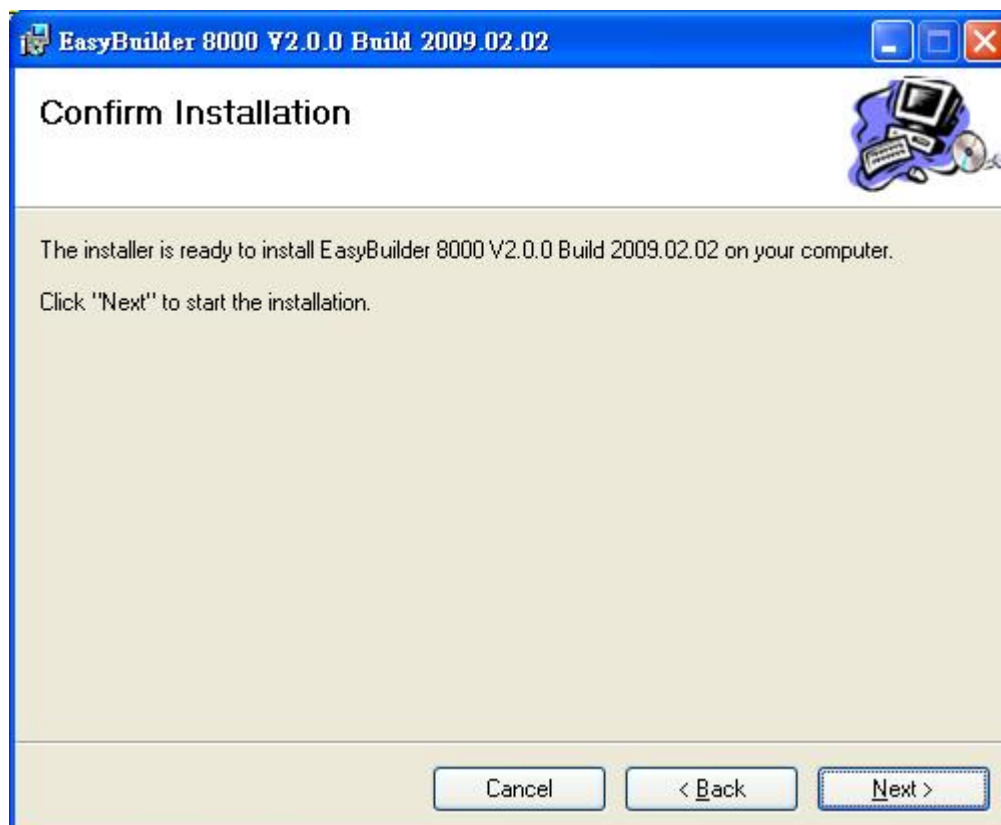


5) Installation processing.

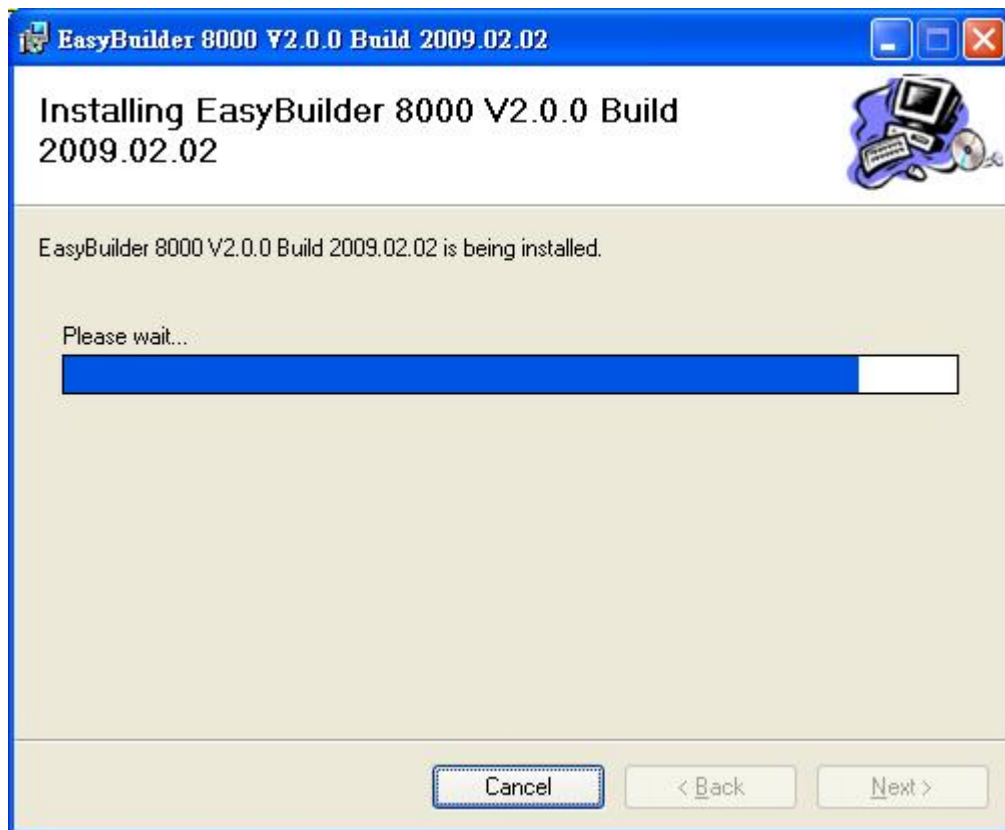



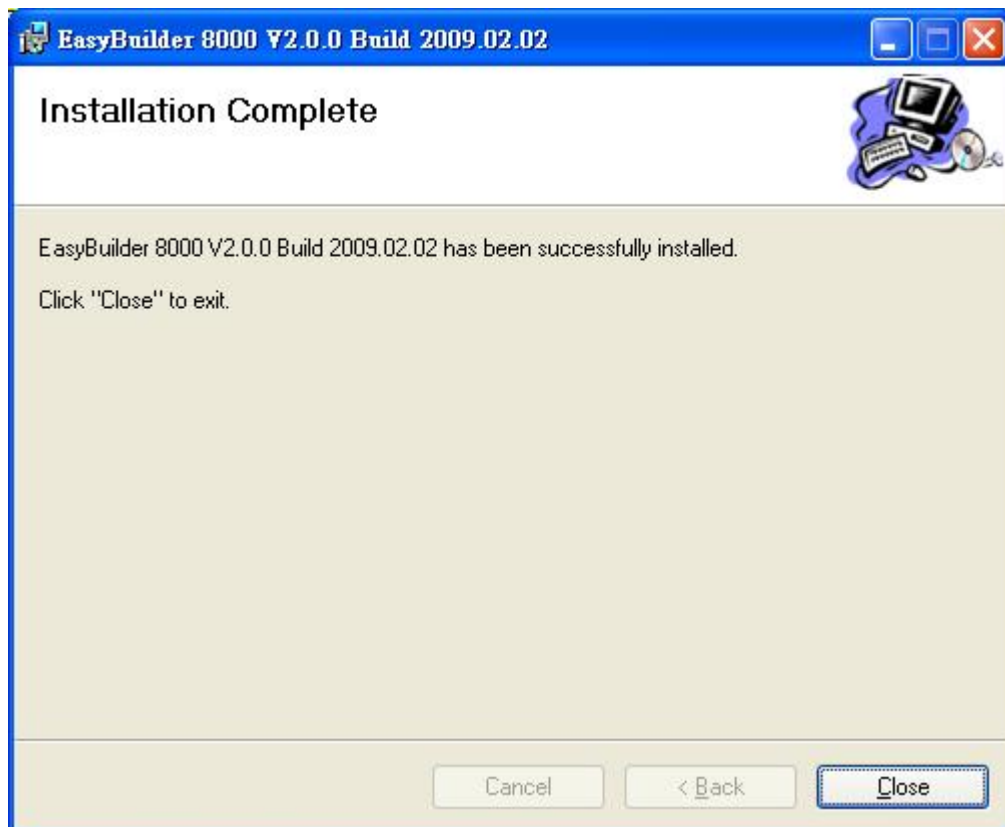



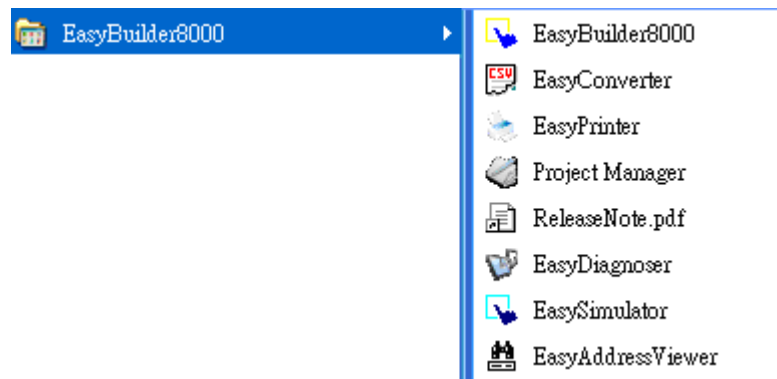

6) Click "Close" to complete the installation.



Choosing menu [Start] / [Programs] / [EasyBuilder8000] to start the program.



The identification of each selection under the directory of the software:

 EasyBuilder8000	EB8000 editing software
 EasyConverter	Data record conversion tool
 EasyPrinter	MT remote printer server
 Project Manager	EB8000 related applications management
 ReleaseNote.pdf	The software version and latest information
 EasyDiagnoser	Monitor communication and debug project when online simulation
 EasySimulator	Application execute simulation without installing EB8000
 EasyAddressViewer	View the register range of device type