


## **Extension ED module**

### XD-2PT2DA-A-ED

### Fast manual

Thanks for purchasing XINJE XD series PLC and extension module. This manual will introduce the electric features and using method of XD series extension ED module. Please read this manual carefully before using the products, make sure the wiring operation is safe.

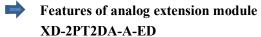

- 2 channels analog output: current output mode, 0~20mA or 4~20mA.
- 2 channels PT100 temperature input: temperature range -100~500°C, precision
- > 10-bit high precision analog output
- As the special function ED module of XD, XD series PLC can connect 1 XD-2PT2DA-A-ED module.

## Safety precautions

# **■** Control system design attentions



- ♦ Make sure design the safety circuit, to ensure that the control system can still work safety when the external power supply cut off or PLC broken.
- ◆ Make sure set emergency braking circuit, protection circuit, interlock circuit of forwardreverse running in PLC external circuit and upper-lower limit switch to prevent from machine damage
- ♦ In order to make the equipment safe operation, please design external protection circuit for important output signal
- ◆ PLC CPU will close all the output when detecting the system error; the output will lose control when the PLC circuit has problem. Please design suitable external control circuit to ensure the device working normally.
- ◆ If the PLC relay or transistor unit is broken, the output cannot be ON or OFF.
- ◆ The PLC is designed for indoor environment, the lightning protection must be installed in the power supply system to avoid PLC and other device damage.

# ■ Installation and wiring attentions



- ◆ Do not use the PLC in the following environment: dust, soot, corrosive gases, flammable gas, high temperature, condensation, vibration, impact, lightning, fire.
- Do not let the metal scrap and wire head drop into the ventilation hole of PLC, otherwise it will cause fire or error operation.
- ◆ Do not cover the ventilation hole of PLC, otherwise it will cause fire, error operation.
- ♦ The I/O wiring must be fixed enough, otherwise the bad contactor will cause fault Attention!
- ♦ It can use external power supply for extension module DC24V power.
- Please use shield cable for high frequency I/O wiring to avoid interference.

### Run and maintenance



- ♦ Please connect all the cable include PLC, extension module and BD board after shutting down the power supply.
- ◆ Please operate as the manual for online operation, forced output, RUN, STOP.



Product information

- Please discard the product as industrial waste.
- ♦ Make sure cut off the power supply when installing or uninstalling the extension card.

### Naming rule

### <u>XD</u>- <u>2 PT 2 DA</u> - <u>A</u> - <u>ED</u>



- XD: XD series extension module
- Analog input channel: 2: 2 channels temperature input
- PT: PT100 temperature input
- Analog output channel: 2: 2 channels analog output
- Analog output DA: analog output
- A: current type for input and output
  - Module type ED: left extension ED module

#### **■** Basic parameters

XD series PLC can connect 1 extension ED module, the type is not limited.


#### Table 1: analog extension module XD-2PT2DA-A-ED general specifications

| Item                    | Specifications  |
|-------------------------|---|
| Using environment       | No corrosive gas  |
| Environment temperature | 0°C~60°C  |
| Storage temperature     | -20~70°C  |
| Environment humidity    | 5~95%RH   |
| Storage humidity        | 5~95%RH   |
| Installation            | Fix with M3 screw or install on the rail DIN46277(width |
|                         | 35mm)   |
| Dimension               | 100.0mm×18.0mm×90.0mm                                   |


Table 2: analog extension module XD-2PT2DA-A-ED I/O precision

| Item             | Temperature input (PT)  | Analog current output (mA)          |
|------------------|-------------------------|-------------------------------------|
| Temperature      | -100∼500°C              |                                     |
| input range      | -100~500°C              | _                                   |
| Analog output    |                         | 0~20, 4~20mA                        |
| range            | _                       | External load resistor is less than |
|                  |                         | 500Ω                                |
| Digital input    | _                       | 10-bit binary number (0~1023)       |
| range            |                         |                                     |
| Digital output   | -1000~5000              |                                     |
| range            |                         |                                     |
| Resolution       | 0.1°C                   | 1/1023 (10-bit)                     |
| integrated       | ±0.8% of the full scale | 1%                                  |
| precision        |                         |                                     |
| Transformation   | 2ms/1 channel           | 2ms/1 channel                       |
| speed            |                         |                                     |
| Power supply for | DC24V±10%, 150mA        |                                     |
| analog           |                         |                                     |

# Table 3: analog extension module XD-2PT2DA-A-ED AD transformation diagram

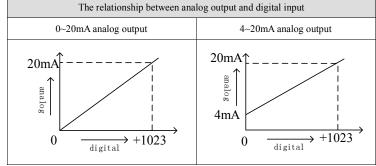


Note: when the input data is over K1023, DA transformed analog output will keep 20mA.

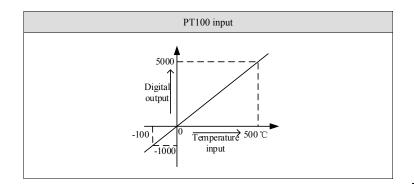

### Product appearance

Here listed I/O terminal configurations of XD series extension module XD-2PT2DA-A-ED.

#### **Product structure**

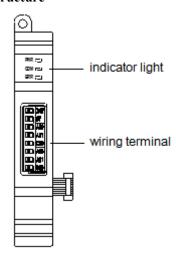

#### Each part name:

| Name               |     | Function   |
|--------------------|-----|--|
|                    | PWR | The LED lights when the ED module has power supply |
| Indicator          | COM | The LED lights when the ED module communication    |
| light              |     | port works well                                    |
|                    | ERR | The LED lights when the ED module has error        |
|                    | 24V | ED module external power supply 24V +              |
| Wiring<br>terminal | 0V  | ED module external power supply 24V -              |
|                    | A0  | Channel 1 PT100 input                              |
|                    | Al  | Channel 2 PT100 input                              |
|                    | C0  | PT1, PT2 ground                                    |
|                    | AO0 | Channel 1 analog output                            |
|                    | AO1 | Channel 2 analog output                            |
|                    | CO0 | AO0, AO1 ground                                    |

# Product dimension and installation


### ■ Installation

Do not install the module in below environment:

- Direct sunlight
- Environment temperature out of range 0-50°C
- Environment humidity out of range 35%-85% RH
- Condensation as severe changes in temperature
- Corrosive gas and flammable gas
- Dust, iron filing, salt, fume
- Vibration and impact
- · Spray oil, water and medicine • Strong magnetic field and strong electric field


XD series extension ED module can be installed in com3 port of XD series PLC.

Note: please cut off the power before operation!

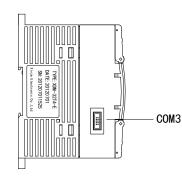

### ■ **Product dimension** (Unit: mm)

XD series extension ED module dimension is shown as below

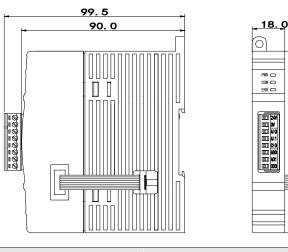



# Electric design reference

#### ■ I/O address

XD series extension ED module will not occupy I/O unit, the transformed value is stored in PLC register. The following is the PLC register corresponding to each channel

#### Working mode setting

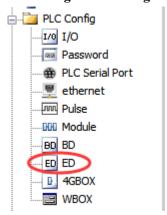

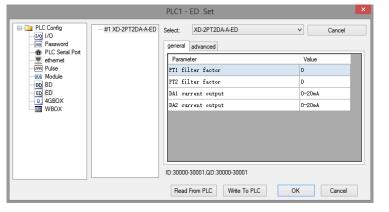

Steps:

- 1. open the XDPpro software, find the left project bar, click PLC config/ED.
- 2. choose the correct module type.
- 3. set the module parameters such as current output range.
- 4. click write to PLC, then re-power on the PLC to make the setting effective.


Note: first-order low-pass filtering weighted this sampled value with last filter output value, and got the effective filtering value. The filter coefficient is set by user, the range is 0-254, 0 means no filter.

#### **■** External connection


Please pay attention to below items when wiring:

- ① please use shield cable to avoid interference, and single point connect to ground for the shield layer.
- 2 when XD-2PT2DA-A-ED connects external + 24V power supply, please choose the power supply from PLC to avoid interference.

#### ♦ Current single-ended output

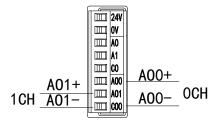


#### ♦ PT100 temperature input

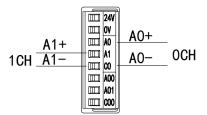

# **Programming example**

**Example:** read one channel of temperature signal, and output one channel of  $0\sim20\text{mA}$  current signal.

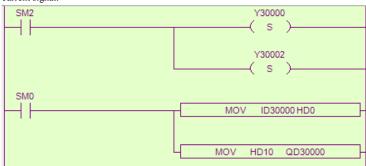

Explanation:

SM2 is power on initial coil, and set ON the PT and DA channel enable bit.

SM0 is always ON coil when the PLC is running.

When the PLC starts to work, it will read PT channel 1 digital value (actual temperature  $\times 10$ ) to HD0 register, and send the HD10 value to QD30000, and output related current signal.